


1 Parts Identification

MRGW 34-48EXT

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

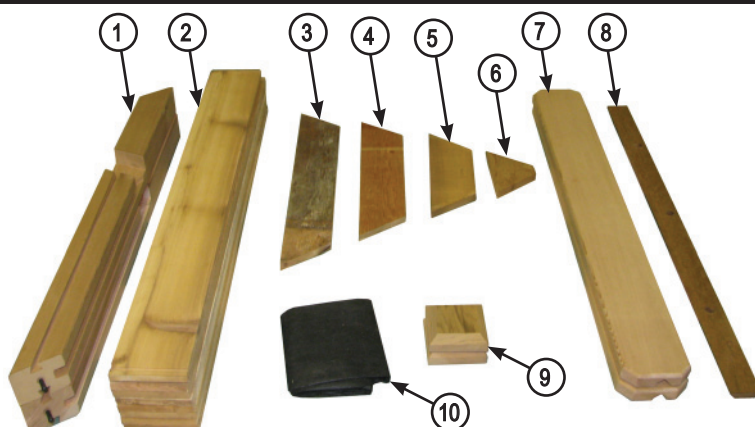


Parts List

| ITEM | QTY. | PART # | DESCRIPTION |
|------|------|---------|---|
| 1 | 2 | CP41 | Corner Post, 3-1/4" x 3-1/4" x 41-1/4" |
| 2 | 8 | R4501 | Front & Back Side Rails, 45" x 5-5/8" x 13/16" |
| 3 | 1 | ES2613L | End Side Rail w/Logo, 26-1/2" x 5-1/2" x 13/16" |
| 4 | 1 | ES2013 | End Side Rail, 20-1/4" x 5-1/2" x 13/16" |
| 5 | 1 | ES1313 | End Side Rail, 13.7/8" x 4-3/8" x 13/16" |
| 6 | 1 | ES0713 | End Side Rail, 7-3/4" x 5-1/2" x 13/16" |
| 7 | 2 | SH43 | Shelves, 43-3/4" x 5-1/2" x 1-3/8" |
| 8 | 1 | BCR43 | Bottom Center Rail, 43-3/8" x 2-1/2" x 13/16" |
| 9 | 2 | R3100 | Post Cap, 4-5/8" x 4-5/8" x 1-1/2" |
| 10 | 1 | FL3652 | Fabric Liner, 36" x 52" |

2 Post Assembly

Place two 3-1/4" x 3-1/4" x 41-1/4" corner posts (Item 1) together as shown.

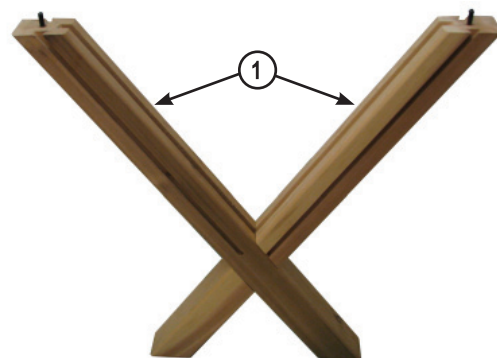

Packaged & Inspected by:

Date:


Continued

3 Side Rail Assembly

Remove the two post caps from the Garden Wedge.

NOTE: The extension kit can be assembled on either end of the Garden Wedge.


Install four 45" x 5-5/8" side rails (Item 2) into the upper part of the slots between the two corner posts and slide down.

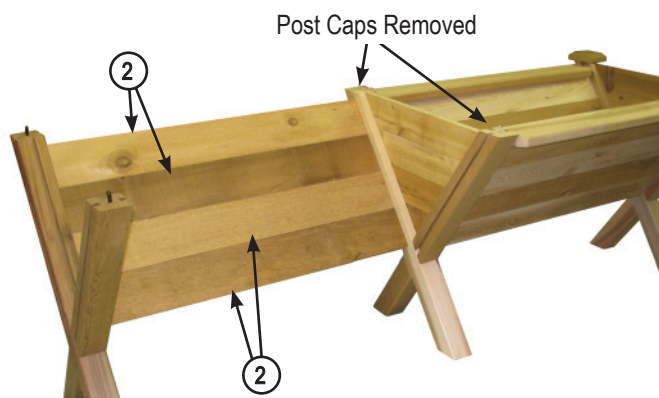

4 Side Rail And End Side Rail Assembly

Install the four remaining 45" x 5-5/8" side rails (Item 2) into the upper part of the slots between the two corner posts and slide down.

Install the four end side rails (Item 6, 5, 4 & 3) into the upper part of the slots between the two corner posts and slide down.

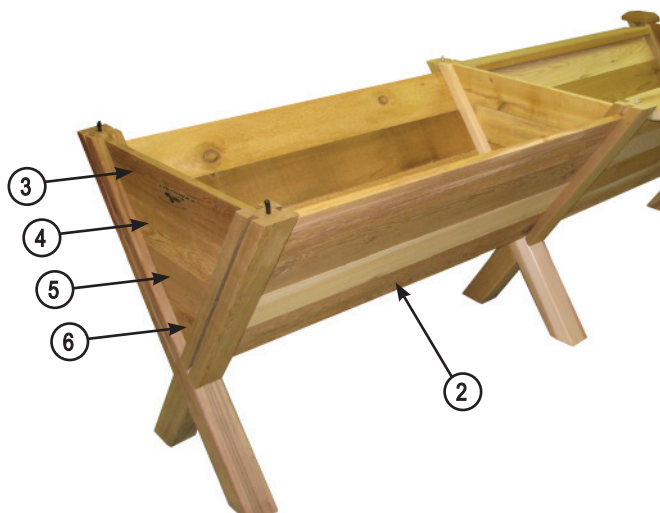


5 Bottom Center Rail Assembly

Install the 43-3/8" x 2-1/2" bottom center rail (Item 8) with the tapered edges of the rail facing down.

Install the fabric liner into the Garden Wedge.

Soil Capacity: 6.5 Cubic Feet

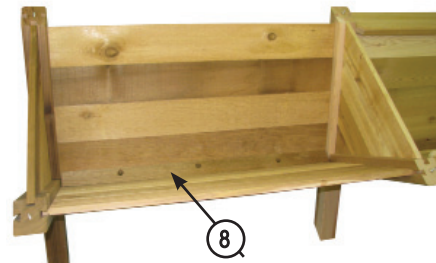

6 Top Rail Assembly

Install the two 43-3/4" x 5-1/2" shelves (Item 7) onto the side rails on both sides of the Garden Wedge.



7 Post Cap Assembly

Remove the rubber cap from the post studs.

Align the hole of the 4" x 4" post cap (Item 9) with stud and tighten until the cap makes contact with the post. Do not overtighten.

